



STARTING

POS.	CODE	DESCRIPTION	Qty
6	2100.109	preheating glow plug 12 V	2
7	2185.548	glow plug wire	1
12	5840.194	starting motor 12 V 1,1 KW	1
13	9730.045	screw M 10 X 30	2
14	6745.050	oil switch 0,3 bar (M 12)	1
14	6745.056	oil switch 1,4 bar (white mark)	1
15	4670.060	copper gasket diam.12	1
16	«-----»	relay	0
20	3240.004	nut M 5	2
21	7626.066	washer	2
22	3240.004	nut M 5	1
22	3240.020	nut M 8	1
23	7565.003	washer diam. 5	1
23	7565.007	washer diam. 8	1
24	«-----»	starting motor wire - no longer avail.	0
26	7362.228	voltage regulator. 12V 14/26A-6 contacts for alternator 3 wires	1
26	7362.298	voltage regul.12 V maX 30 A - 5 contacts for alt.2 wires	1
27	«-----»	inlet	0
29	2185.867	glow plug wire	1
30	2193.204	contr boX 12V	1
31	8565.079	stator for alternator 3 wires 12V 20A (for ceramic rotor)	1
31	8565.083	stator for alternator 2 wires 12V 30A (for ceramic rotor)	1
32	1557.103	wire connection	1
33	6491.013	pipe elbow	1
34	5830.161	connection boX	1
37	5168.079	sensor plate	1
40	2185.905	wire for voltage regulator	1
41	2186.143	wire with diode 12V	1
42	5041.274	key switch	1
43	8545.507	bracket	1
45	4062.231	fuse 30 A	1
46	«-----»	wire	0
50	7369.202	preheating plug control boX	1
52	6275.154	plate	1
53	1557.122	connection 2 ways	2
54	1557.119	connection 14 male contacts	1
55	1557.118	connection 14 female contacts	1
56	4775.540	guard	2
57	7245.432	EL.PANEL ASS.Y 7 lights (12V)	1
57	7245.452	el.panel 7 lights (12V)	1
58	2185.962	wire eXtension mm 2000	1
58	2186.105	wire eXtension mm 1000	1
59	2186.107	wire for dashboard	1
60	2145.060	guard	1
61	1557.100	connecting holder	1
62	1557.101	connecting holder	1
64	9180.188	faston female 4,25	12
65	9180.187	faston male 2,76	12
66	9180.189	faston male 9,5	2
67	9180.190	faston female 8,5	2

